 


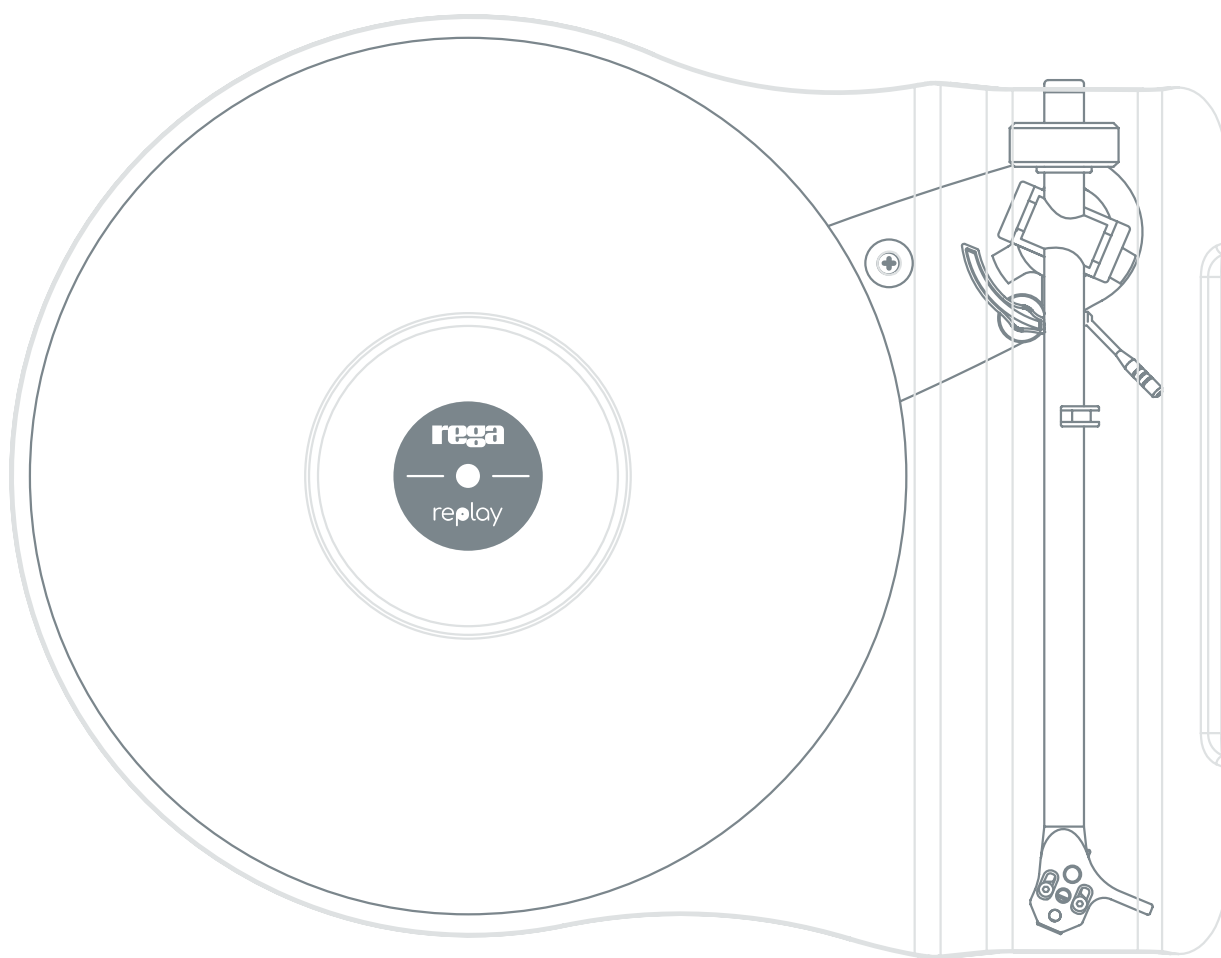

replay turntable

User Manual


rega
MADE IN ENGLAND

Power supply specifications

PS2 (UK) / (EU) / (AUS/NZ)	
Input	230V AC 50Hz 40mA
Output	24V AC 100mA AC
PS2 (KR)	
Input	220V AC 60Hz 40mA
Output	24V AC 100mA AC
PS2 (USA)	
Input	120V AC 60Hz 90mA
Output	24V AC 100mA AC
PS2 (JPN)	
Input	100V AC 50/60Hz 100mA
Output	24V AC 100mA AC


PS2 (EU)

Rega PS2 (Level VI A)	
Input voltage	230V
Input AC frequency	50Hz
Output voltage	24V AC
Output current	100mA
Output power	2.4W
Average active efficiency	77.70%
No-load power consumption	0.16W

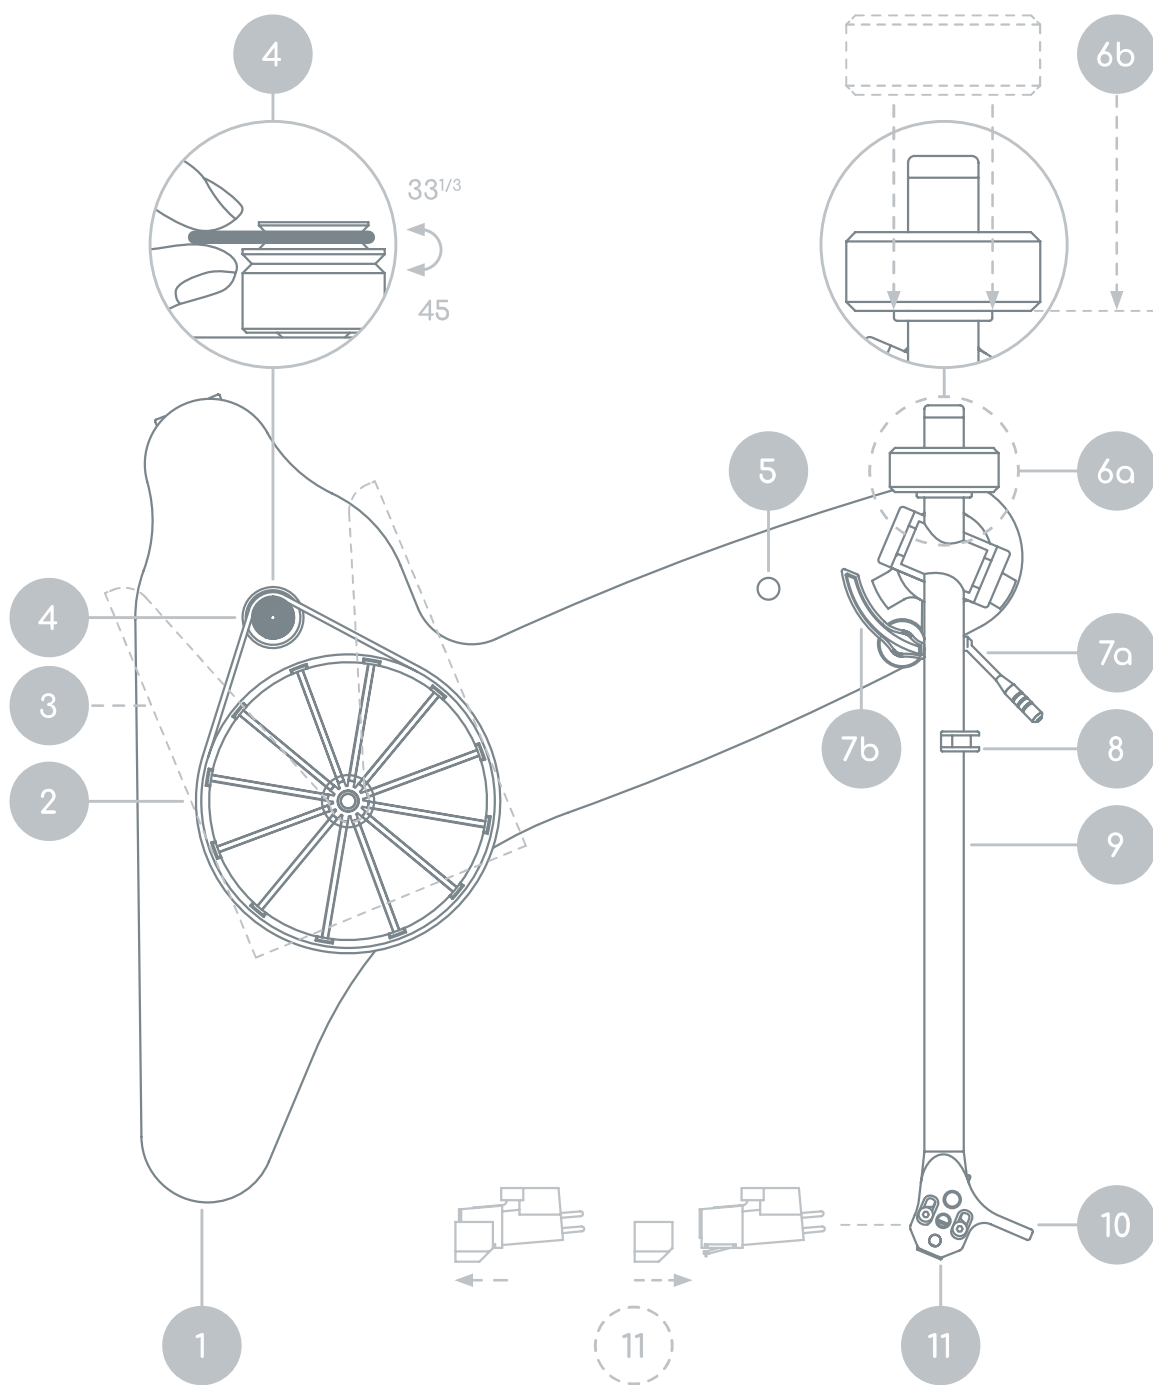 

- | | |
|--|--|
| 1. Plinth | 8. Tonearm Clip - Retains the tonearm when not in use. |
| 2. Sub Platter | 9. RB110 Tonearm |
| 3. Packing Card - Underneath 'sub platter', remove before use. | 10. Tonearm Headshell Finger Lift |
| 4. Drive Belt / Pulley ($33\frac{1}{3}/45$) | 11. Carbon MM Cartridge (fitted) |
| 5. Dust Cover Location Hole | 12. Platter / Mat* |
| 6. Balance Weight (a) / Stop Point (b) | 13. Phono Cable |
| 7. Lift/Lower (a) / Cueing Platform (b) - Used to raise and lower the cartridge on and off the record surface. | 14. On/Off Switch |
| | 15. Power Input Connection |

*The mat provided with the Replay has two different textures. Although not critical, Rega recommends placing the "rough" side facing down contacting the platter surface for optimum grip.

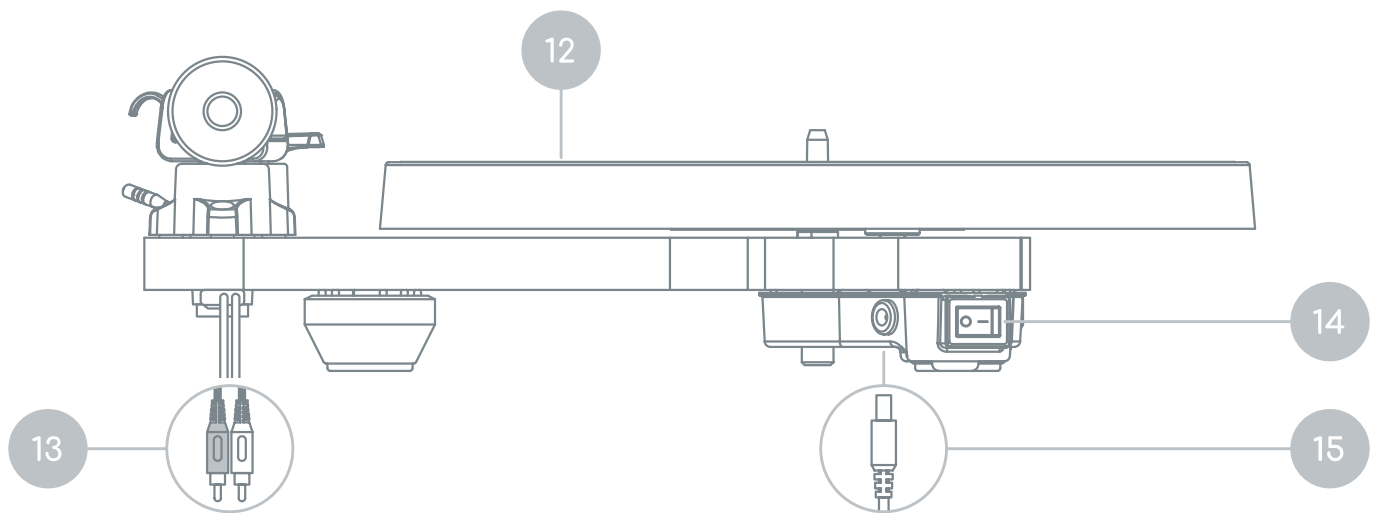


Setting up your turntable

- Carefully unpack the turntable. Always keeping it upright to prevent oil loss from the central bearing.
- Remove the packing card from beneath the sub platter (2) and fit the platter and mat (12).
- To achieve the required downforce for the fitted Carbon MM cartridge (11), simply push the balance weight (6a) onto the rear of the tonearm until it reaches the stop point (6b).
- Connect the power supply to the rear of the turntable (15).
- Connect the phono cable (13) to an appropriate amplifier with an integrated phono stage (usually Input 1) or a standalone phono stage.
- Bias is pre-set on the RB110 tonearm, no setting is required.
- **IMPORTANT:** Only use with the supplied Rega PS2 power supply with this product.
- If you wear out or damage your Carbon stylus, you can order a replacement from your nearest Rega dealer. Fancy an upgrade? Try the Carbon Pro stylus, details on www.rega.co.uk/accessories/carbon-pro-upgrade-stylus

Playback

- To select playback speed, remove the mat and platter (12), manually move the drive belt (4), position between 33^{1/3} (top) to 45 (bottom), as required. It is recommended to switch off the turntable when changing speed.
- Carefully remove the stylus guard from the cartridge (11).
- Place the vinyl on the mat.
- Power up the turntable via the on/off switch located at the rear behind the motor cover (14).
- Use the lift/lower device (7a) to cue the tonearm for the selected track.
- Simply lower the lift/lower device (7a) to start playback.
- Always use the lift/lower device (7a) at the start and end of a record to prevent damage to the vinyl surface.
- If dust accumulates on the stylus, simply remove by blowing the stylus, or carefully use a stylus brush (we do not recommend using fluids to clean the stylus).

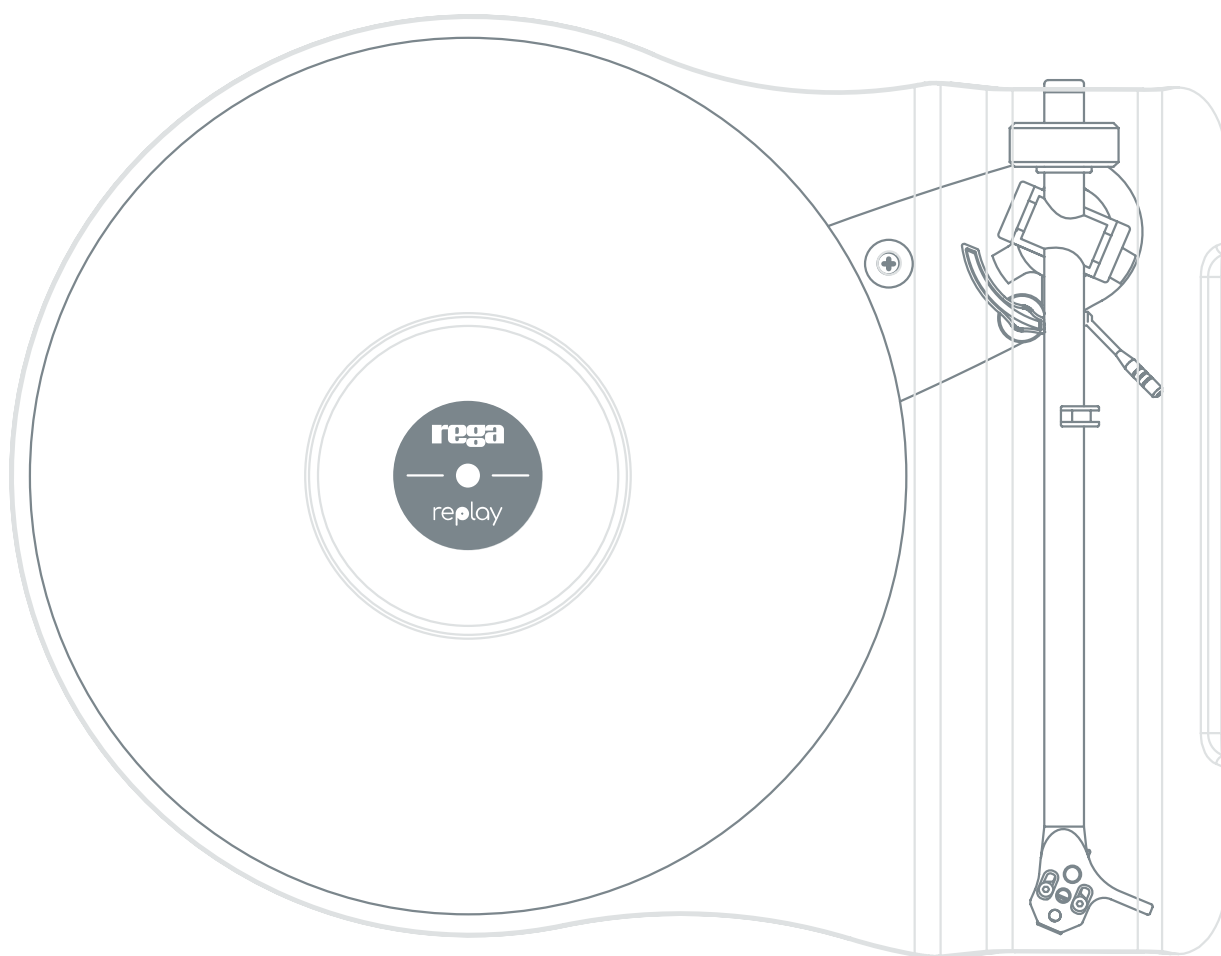

rega

MADE IN ENGLAND

